

everything *Mary*®

Hardware  
How to...


## Slotted Purse Handle

### Tools/Supplies Needed:


- Ruler/Tape Measure
- Pencil
- Sewing Machine
- Thread

### Instructions:


1. Measure ring to see how wide you need the tab to be. Tab should measure about 2" high.

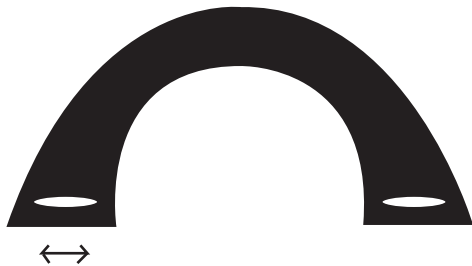

2. Make four tabs according to your measurements. Two tabs for front panel and two for back.

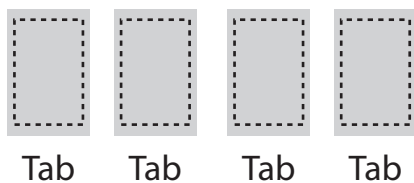

3. Sew tabs to the front and back panels of the purse.

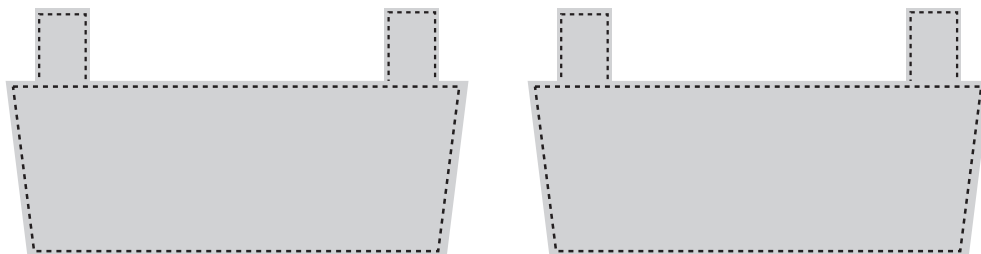

4. Insert handle through tabs. Fold tabs down and sew to inside of purse panels.

